

LE•MEGA

LIFE & ALOUD

DR2 PORTABLE AM & FM RADIO



Owner's manual

LE•MEGA

LIFE & ALOUD

DR2 PORTABLE AM & FM RADIO

If you have any questions or suggestions, please share with us.

info@lemegaaudio.com
www.lemegaaudio.com

1. Introduction Safety Instructions


PLEASE READ THIS OWNER'S MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND STORE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE.

- Do not use this product near water or moisture.
- Clean only with a dry cloth.
- Unplug this product from the wall outlet before cleaning.
- Place the unit on a solid surface.
- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs and the point where they exit from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself.
- Opening or removing covers may expose you to dangerous voltages or other hazards.
- Please contact the manufacturer to be referred to an authorized service center near you.
- To prevent risk of fire or electric shock, avoid over loading wall outlets, extension cords, or integral convenience receptacles.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.




2. CONTROLS, CONNECTORS

PRODUCT OVERVIEW

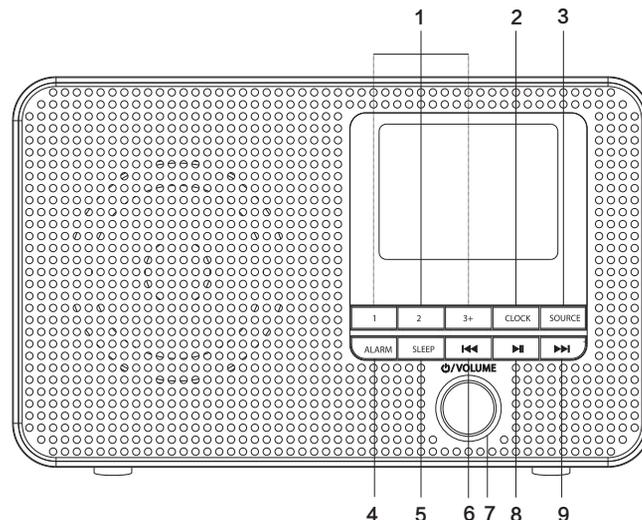

1. Preset 1,2,3+	6. TUNE- / ◀◀
2. CLOCK	7. Power on/off & Volume & Select/Mute
3. SOURCE	8. PLAY/PAUSE / ▶▶
4. ALARM	9. TUNE+ / ▶▶
5. SLEEP	

REAR VIEW

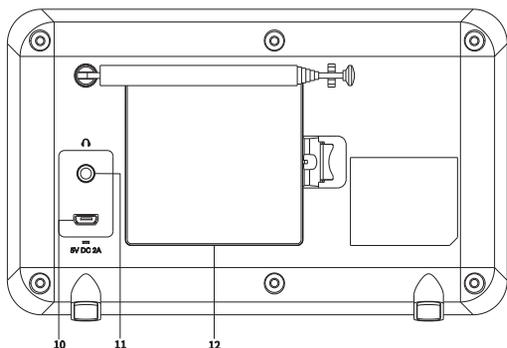

10	DC power in (5V)	12	Battery compartment.
11	Headphones out.		

GETTING STARTED

ACCESSORIES INCLUDED

Carefully remove the unit and all accessories from the package.

Please verify that you have all the following accessories before recycling the gift box.

- Owner's Manual
- Warranty Card
- Power charging cable

UNDERSTANDING THE CONTROL FUNCTIONS

QUICK SETUP

Fully extend the Telescopic antenna to ensure good reception in both AM and FM Radio modes. It may be necessary to alter the position of the Radio and/or the Telescopic antenna to achieve the best signal.

1. Connect the power cable to the input at the rear of the DR2 and then plug the cable into an outlet or insert 4 x "AA" batteries into the battery compartment to power on.
2. Fully extend the rear telescoping antenna.
3. Press the Power knob on the front to turn the DR2 on.
4. Press the front panel Source button to select the desired source.
5. Adjust the volume to the desired level using the SELECT knob on the front.
6. In AM/FM mode, the TUNE+/TUNE- button allows you to navigate between different stations. Push SELECT knob to choose the stations you want to listen to.

GUIDE TO FEATURES

1. PRESET 1, 2, 3+: Preset 20 AM and 20 FM favorite stations.

Store a station to the preset list - to store a station, selected your desired radio station, then press and hold the PRESET 1/2/3+ button for a second until the LCD display "Preset store #". There are 20 AM presets and 20 FM presets.

Either press the TUNE+/TUNE- button to select your desired station preset number or rotate the SELECT knob and push the SELECT knob to confirm your selection.
Recall a station from the Preset list

To recall a preset station, press and hold the "3+" button and rotate the SELECT knob to select presets station that you have stored. When the display shows your desired preset number push SELECT knob to confirm.

2. CLOCK: Press and hold CLOCK button to choose 24H/12H. Then rotate the SELECT knob to adjust the hours/minutes and push SELECT knob to confirm.

3. SOURCE: Briefly press to cycle through the sources:
FM. AM and Bluetooth.

1) In FM mode, DR2 will tune to the start of the available FM range (87.50MHz) or the last FM station listed.

2) To manually change the FM frequency, Press the TUNE+/TUNE- button to change the frequency by 0.1MHz.

4. ALARM: Briefly press alarm button and use SELECT knob to cycle through Alarm 1 and Alarm 2.

Rotate and press the SELECT knob to adjust and set the hour and minutes and press to move to the next setting.

Alarm Mode : Buzz/AM/FM

Volume: rotate the SELECT knob to set the required alarm volume from 0 to 30.

5. SLEEP : with the DR2 playing AM/FM, you can set a period of time before the radio enters 'standby' mode.

Note: the radio must be active and not in 'standby' mode already.

To set the sleep timer, Briefly press SLEEP to cycle through the sleep timer from 10 MINS, 20 MINS, 30 MINS, 40 MINS, 50 MINS, 60 MINS, 70 MINS, 80MINS, 90 MINS or Sleep OFF. Stop when the required time is displayed, after a brief moment the screen returns to the screen being used before the sleep function was selected.

To cancel a sleep time, select Sleep OFF from the sleep options.

Note: A sleep time is automatically cancelled if DR2 is put into Standby.

6. TUNE- / ◀◀ : Press to select the previous track under AM/FM/Bluetooth mode; Press and hold the Tune- button 2 seconds to auto-scan the stations under the AM/FM mode.

7. POWER (Turn ON/OFF/STANDBY) :

1) Push to power the DR2 On or Off (Standby).

2) When your DR2 is using power adapter, press POWER button to switch 'on' and 'standby'. Unplug the power adapter to turn off your DR2 completely.

3) When your DR2 is using batteries, press POWER button to switch 'on' and 'off'.

VOLUME +/VOLUME- button: Turn the Volume dial to increase or decrease the volume. The volume knob may also be used to navigate when in the station List.

8. PLAY& PAUSE/ ▶▶ : Press and hold this button to do auto scan AM/FM stations and store the available stations to preset list automatically.

In AM/FM mode, Press and hold "Play/Pause" button, it will automatically scan for the available radio stations and store the stations to preset list.

9. TUNE+ / ▶▶▶ : Press to select the next track under AM / FM/ Bluetooth Mode; Press and hold the Tune+ button 2 seconds to auto-scan the stations under the AM/FM mode.

Bluetooth Operation

Streaming music and control from Smart device.

Prior to pairing, verify your device is not connected to any other Bluetooth product. Devices may pair differently. Below is a general guide.

1. Press to Mode to Bluetooth mode. This will power on the Bluetooth. Turn the volume up about ¼ to start. Also turn up the volume on the smart device (the device you are streaming from).
2. Turn on the Bluetooth on your enabled device.
3. Select Bluetooth device name "LEMEGA DR2" when it appears on your device's screen to initiate searching.
4. You can start to play your music files wirelessly. Adjust the volume level on your device.

You should not have to pair your device again.

Depending on your device, you may need to make multiple attempts at Pairing and/or Connecting to the "LEMEGA DR2", but please give your device adequate time to Pair or Connect before repeating the process.

TECHNICAL SPECIFICATION

Model: DR2
Type: Portable AM& FM Radio
Power output: 1CH X 2W
Power Supply: 5V DC or 4AA batteries [battery not included]
Dimension (mm): 175*106*54MM
Weight: 0.45KG

Specifications are subject to change without notice.

If you have any questions or suggestions, please share with us.

info@lemegaaudio.com
www.lemegaaudio.com